Electric Starting Procedure

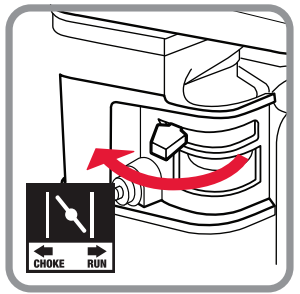

1. CLOSE CHOKE

2. OPEN FUEL VALVE

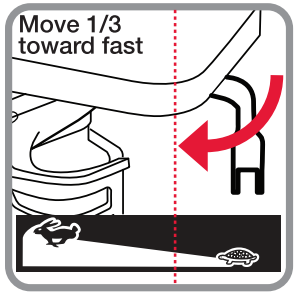

3. ADJUST THROTTLE

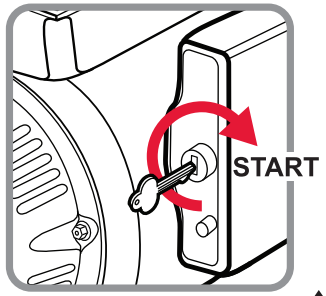

4. TURN TO START

5. CHOKE TO RUN

IMPORTANT: Breaking-in the engine will help to ensure proper equipment and engine performance. The operational break-in period will last about 3 hours of use. During this period:
• Do not apply a heavy load to the equipment • Do not operate the engine at its maximum speed.

PREDATOR™
ENGINES

QUICK START GUIDE

Horizontal Shaft Gas Engine **Item:** 60340

Engine Components

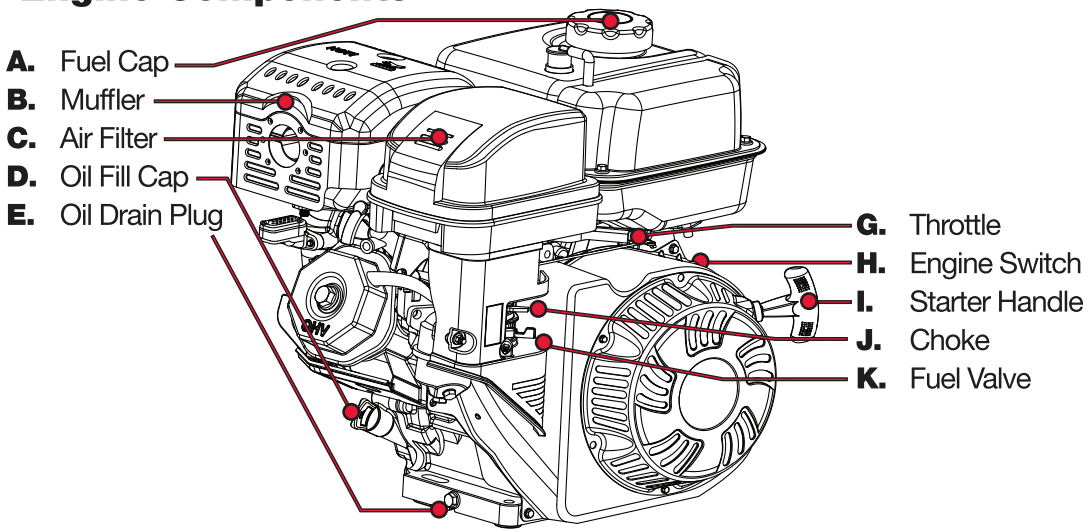

READ AND UNDERSTAND USER MANUAL BEFORE USE.

STOP

Add Fluids

Check oil and fuel levels
If needed, fill as shown below

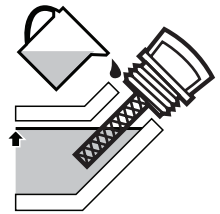

Add oil to engine crankcase

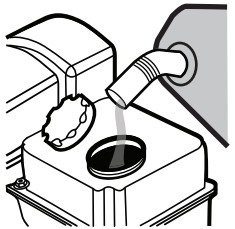

Add fuel to within 1" of the rim of the tank

Note: Use regular Unleaded 87 Octane. Engine not designed for E85 Ehtanol blend.

Assembly

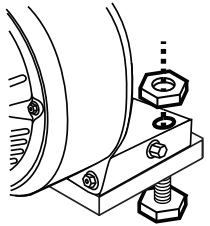

Mount the engine securely in place

For Electric Start

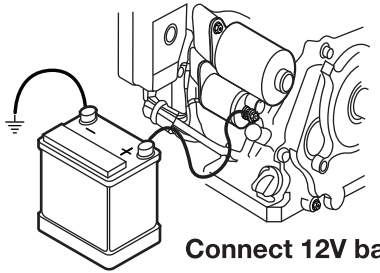

Connect 12V battery

PREDATOR™ ENGINES

Manual Starting Procedure

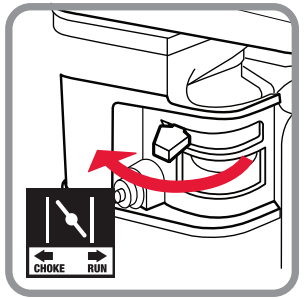

1. CLOSE CHOKE

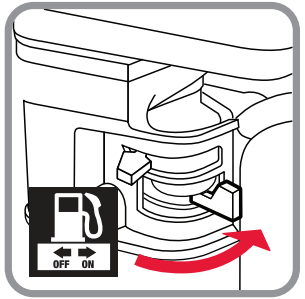

2. OPEN FUEL VALVE

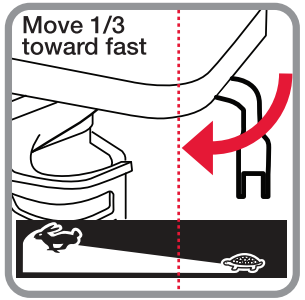

3. ADJUST THROTTLE

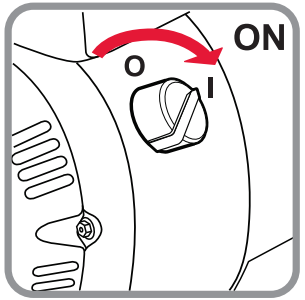

4. SWITCH ON

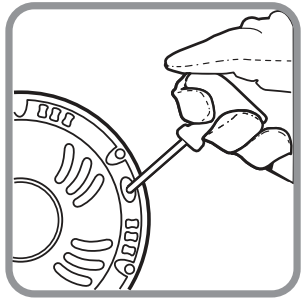

5. PULL START

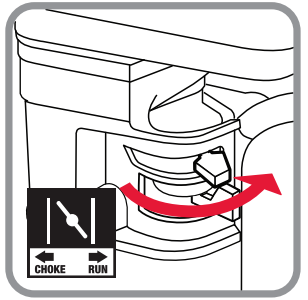

6. CHOKE TO RUN

IMPORTANT: Breaking-in the engine will help to ensure proper equipment and engine performance. The operational break-in period will last about 3 hours of use. During this period:
• Do not apply a heavy load to the equipment • Do not operate the engine at its maximum speed.